


# The Vinyl Source

## How to install the knock stopper for Thorens motors.

### Step Nr 1

Clean the bottom end of the motor spindle like shown in the picture and let it dry. You can use the supplied swab or any alcohol based cleaner.

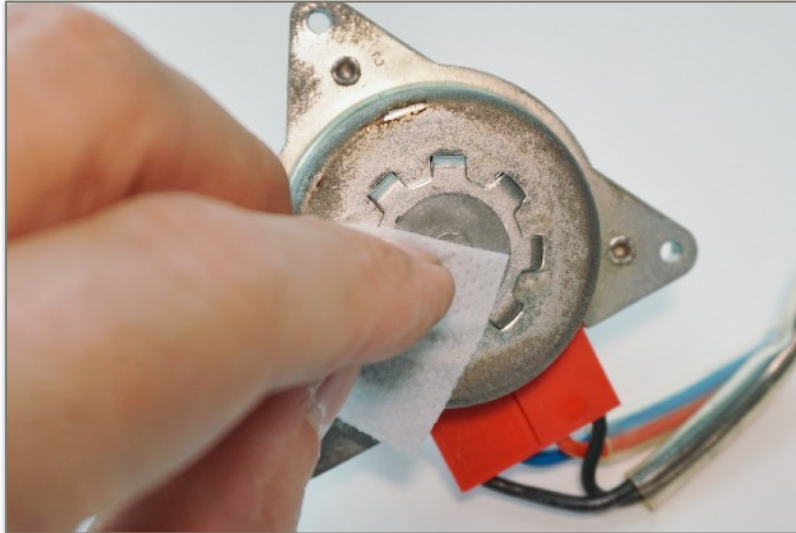

### Step Nr 2


Apply a small quantity of a good quality cyanoacrylate glue like shown in the picture. Place the stopper taking care that it is centred to the motor spindle, if unsure, remove the M5 grub screw and look thru the hole if the motor spindle is centred. Let the glue cure.



# The Vinyl Source

## Step Nr 3

With the help of the supplied 2.5mm Allen key, gently screw the M5 grub screw in until a gentle pressure is placed on the motor spindle.

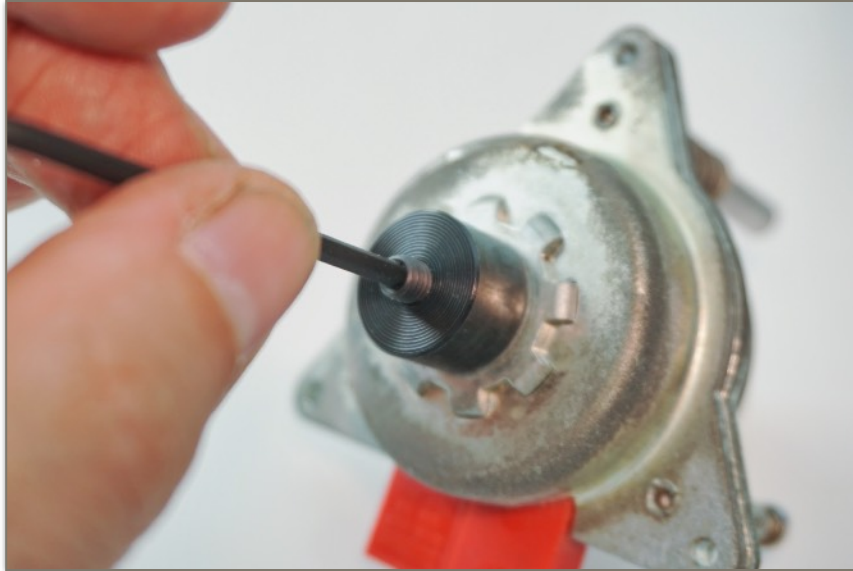

Switch on the motor and see if it rotates freely, a little friction can be expected and, since the motor spindle and the screw rotate in the same direction, the motor rotation should get rid of excess friction itself. Let the motor run for some time, ½ - 1 hour or so. Now the stopper is set. You can put a little drop of a mild adhesive on the screw to make it more resistant to involuntary movements.

Now you can enjoy your Thorens deck without that annoying knocking noise.